

Tabs

The default Tabs are General and Online. Additional tabs are added when a new module is loaded. General contains buttons to open the default settings interface, a log window and buttons for common help functions. Online contains the necessary buttons to establish a connection. E.g. configuration, start and stop of a connection. The online tab also contains all module specific interaction between analyzer and target/simulation.

Revision #1

Created 2023-02-16 01:44:23 UTC by Tsuyoshi.Kato

Updated 2023-02-16 01:44:32 UTC by Tsuyoshi.Kato