

Enabling Warping

Following are the display settings required to enable warping in [Candera](#):

1. Enable warping
2. Set warp matrix
3. Set warp image bounds
4. Apply display settings

Candera's Display class uses a transaction based execution model for setting properties. Several changes can be queued. Changes have to be applied explicitly via a call to [Display::ApplyChanges\(\)](#). Warping matrix data from the warping library can be used directly in [Candera](#).

Revision #5

Created 2023-02-16 07:01:15 UTC by Tsuyoshi.Kato

Updated 2024-07-31 23:16:24 UTC by Tsuyoshi.Kato